

	DOCUMENT TITLE: Installation Qualification Protocol, Floor Scale, Concentrate Reactor	Revision: A
	DOCUMENT #: VV.SLQ015	Effective Date: 29Nov2022

PROTOCOL ATTACHMENT 1 – IQ: Verification of the installation

Verification	Acceptance criteria	Results observed	Conformity C / NC
Brand	Optima	Optima	C
Model number	OPTIMA-OP916 NTEP	OPTIMA-OP916 NTEP	C

Comments:	ST-006 Silq Technologies Equipment Tag 10C190611004 Serial Number
------------------	--

Completed By (Sign and Date):  09 DEC 2022

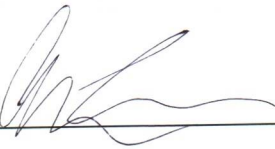
Reviewed By (Sign and Date):  30 Dec 2022


	DOCUMENT TITLE: Installation Qualification Protocol, Floor Scale, Concentrate Reactor	Revision: A
	DOCUMENT #: VV.SLQ015	Effective Date: 29Nov2022

PROTOCOL ATTACHMENT 2 – IQ: Verification of the documentation

Documentation	Acceptance criteria	Results observed	Conformity C / NC
Equipment user manual	Presence of the user manual in English	User manual in English	C
Equipment calibration certificate	Presence of equipment calibration certificate	Calibration certificate present	C
Calibration requirements	Schedule / frequency of calibration determined	Calibration frequency determined	C

Comments:	
------------------	--

Completed By (Sign and Date):  09 DEC 2022

Reviewed By (Sign and Date):  30 Dec 2022

	DOCUMENT TITLE: Installation Qualification Protocol, Floor Scale, Concentrate Reactor	Revision: A
	DOCUMENT #: VV.SLQ015	Effective Date: 29Nov2022

PROTOCOL ATTACHMENT 3 – IQ: Verification of utilities

Verification	Acceptance criteria	Results observed	Conformity C / NC
Power supply	Compliant if the floor scale is powered by AC adapter cable	Powered by AC adapter cable	C
Wiring	No damage to AC adapter cable	No visible damage	C
Operating temperature	10 – 40°C	18.5°C	C
Operating relative humidity	< 90% RH	40% RH	C
Operation	Equipment can be powered on and is operational	Powered on	C

Comments:	
------------------	--

Completed By (Sign and Date):  19 DEC 2022

Reviewed By (Sign and Date):  30 Dec 2022

	DOCUMENT TITLE: Installation Qualification Protocol, Floor Scale, Concentrate Reactor	Revision: A
	DOCUMENT #: VV.SLQ015	Effective Date: 29Nov2022

PROTOCOL ATTACHMENT 4 – Calibration Log

In the table below, record the calibration information for all equipment used during the test. If the equipment is “calibrate before use” then include or refer to the procedure used for calibration, record any equipment required and its calibration info, and record the results of the calibration (data).

Instrument ID	Description	Use	Calibration Date	Due Date	Verified By/Date
ST-013	Temp/Humidity Monitor	Measure Temp/Humidity	10 NOV 2022	10 NOV 2024	G 19 DEC 2022

	DOCUMENT TITLE: Installation Qualification Protocol, Floor Scale, Concentrate Reactor	Revision: A
	DOCUMENT #: VV.SLQ015	Effective Date: 29Nov2022

PROTOCOL ATTACHMENT 5 – Signature Log

In the table below, all personnel who have completed any section of this protocol must include the listed information.

Printed Name	Title	Initials	Signature	Company	Date
Chris Turner	Director of Manufacturing	CT		Silq Technologies	19 DEC 2022